


Operation & Service Manual

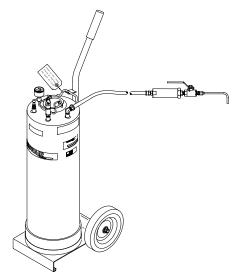

Model: 06-5010-6800 Fluid Service Unit (Mineral Base Fluids)

01/2004 - AD - Rev. OR

Includes Illustrated Parts List

Tronair, Inc.

1740 Eber Road Holland, Ohio 43528-9794 USA

Telephone: (419) 866-6301 • 800-426-6301

Fax: (419) 867-0634

Web Site: www.tronair.com E-mail: sales@tronair.com

TABLE OF CONTENTS

		PAGE
1.0	Description	1
2.0	Specifications	1
3.0	Features	1
4.0	Preparations For Use	1
5.0	Operating Instructions	1
6.0	Maintenance	2
	6.1 Filter	2
7.0	Parts List	2
Parts	s List	3

APPENDIX I Instrument Certification Notice

REVISIONDATETEXT AFFECTEDOR01/2004Original Release

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., it suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur.

1.0 DESCRIPTION

Tronair Fluid Service Unit is a mobile unit designed to provide a source of clean, pressurized fluid for remotely servicing reservoirs and other maintenance functions. This unit will retain enough air pressure for proper operation for an eight hour period. Thereafter, recharging may be required.

2.0 **SPECIFICATIONS**

Model Number: Fluid: MIL-L-23699 06-5010-6800 MIL-PRF-87257

Maximum Pressure: 125 psi (8.6 bar)

Filter: 2 micron **Dimensions:**

> Width: 13-7/8" (35 cm) **Length:** 16-3/4" (42.5 cm) **Height:** 44-1/8" (42.8 cm) Weight: 44 lbs (19.8 kg)

6 gallons (22.7 liters) Capacity:

FEATURES 3.0

- 15 ft (4.6 m) hose
- Large filtered fill port
- Inline filter

PREPARATIONS FOR USE

The unit is shipped fully assembled, and only the following steps are required to make it operational

NOTE: Apply appropriate fluid label to top of reservoir near fill opening.



CAUTION!

Only use the type of fluid for which the unit is designed. Using other fluids will cause contamination and seal deterioration.

1. Remove the fill cap and fill reservoir

OPERATING INSTRUCTIONS



CAUTION!

Do not use on closed hydraulic systems.

To use your Fluid Service Unit, follow the steps below:

- 1. Open ball valve on hose end to deflate pressure from vessel.
- 2. Close ball valve on hose end.
- 3. Fill vessel with proper hydraulic fluid.
- 4. Attach air supply hose to air valve.
- 5. Pressurize vessel to 85 psig (6 bar) maximum and remove air supply hose from air valve.
- 6. Transfer hydraulic fluid by opening needle valve on hose end.



6.0 MAINTENANCE

6.1 FILTER

The filter is of a non-bypass design. This means that if the filter becomes clogged, no fluid will pass to the aircraft. If this happens, replace filter element.


Element replacement schedule should be based on usage and actual fluid samples. For units with low usage, element should be changed at least once annually.

7.0 PARTS LIST

Reference Page 3-4 for ordering information of Replacement Parts and Kits.

Parts List

When ordering Replacement Parts/Kits, please specify Model and Serial Number of your product.

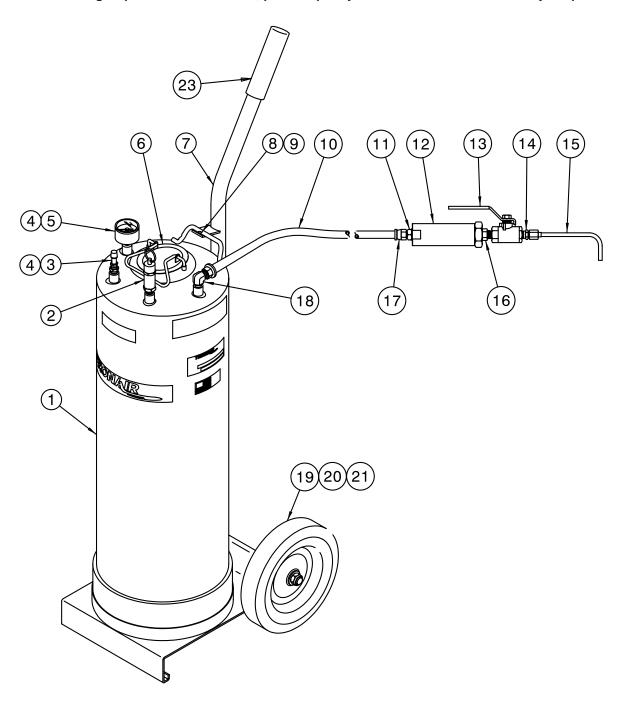

REPLACEMENT PARTS

ITEM	PART NUMBER	DESCRIPTION	QTY
1	H-1218	Vessel, Pressure	1
		Safety Valve (125 psi/9 bars)	
		Air Valve	
		Reducer, Pipe Thread	
		Certified Pressure Gauge (0–160 psi/11 bars)	
		Closure O-ring	
		Screw, Round Head	
		Stopnut, Elastic	
		Straight Thread Connector	
		Element Kit	
		Ball Valve	
		Tube Assembly	
		Straight Thread Connector	
		Swivel, 37° JIC	
		Elbow, Male	
		Flatwasher	
		Jamnut, Elastic	
	H-1223		



APPENDIX I

Instrument Certification Notice



Instrument Certification Notice

The gauge Certificates of Calibration supplied for the gauge(s) on this unit contain the calibration data for the actual instrument calibrated, along with the calibration date of the **STANDARD** used to perform the calibration check.

The due date for re-calibration of the instrument should be based upon the date the instrument was placed in service in your facility. Re-calibration should be done on a periodic basis as dictated by the end user's quality system or other overriding requirements.

Note that Tronair, Inc. does not supply certificates of calibration on flow meters or pyrometers unless requested at the time of placed order. These instruments are considered reference indicators only and are not critical to the test(s) being performed on the aircraft.

Tronair, Inc.

1740 Eber Road Holland, Ohio 43528-9794 Phone: (419) 866-6301 ! 800-426-6301 Fax: (419) 867-0634